

Joining Guidelines.

CPSA corrugated structured wall polyethylene pipes incorporate an advanced spigot and socket elastomeric joint, designed to meet the performance requirements of AS/NZS 5065.

Pipes are designed with standard elastomer (EPDM or SBR) gasket/s for simple and effective joining.


Step 1.

Insert seal into the correct valley/s as shown and are clean prior to joining.




Rubber Ring

Sizes: DN225 to DN600, DN900

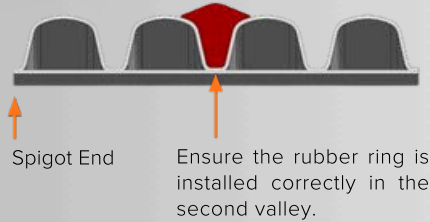


Sizes: DN750, DN1050

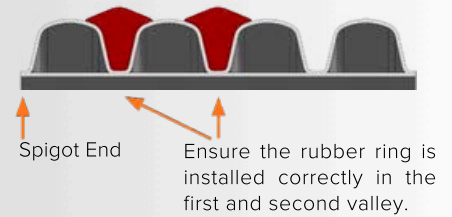

Step 2.

Once seals and jointing areas are clean, apply approved lubrication to the outside of the seal and inside socket area.

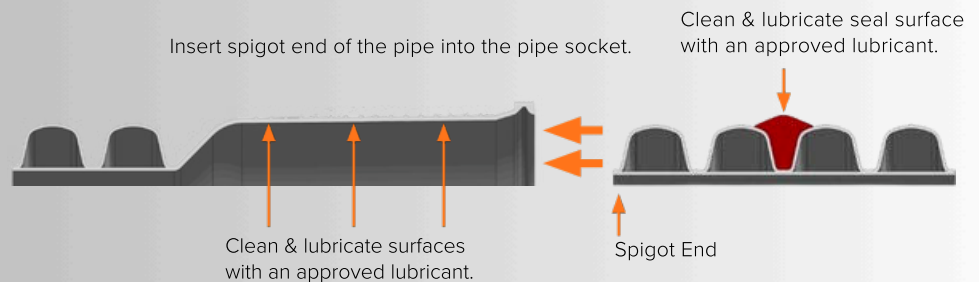


Step 3.

Ensure pipe spigot is aligned square to the socket during spigot insertion, whilst applying constant force.




The witness mark is moulded on the pipe corrugation. The witness mark may sit slightly into the socket after installation.

Sizes: DN225 to DN600, DN900

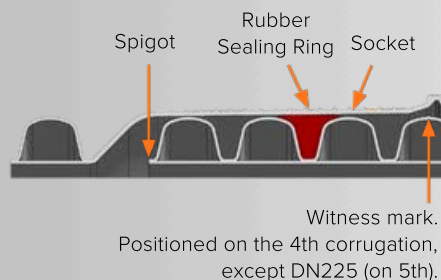

Sizes: DN750, DN1050

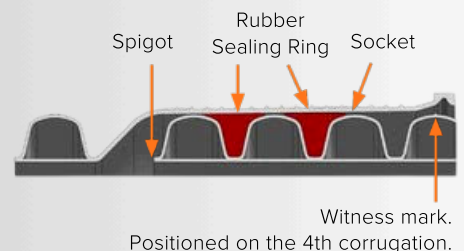

The products shown form part of our continuous improvement program and as such the product designs, specifications and materials may be changed without notice. All warranties relating to accuracy, completeness, or suitability for any particular purpose and all liability for any loss, damage or costs incurred relating to the use of this information are excluded.

+61 461 466 730
sales@cpsa.net.au
cpsa.net.au

